Dragon Ball Z ™
Handheld Game
Operating Instructions

INSTALLATION OF BATTERIES

- Unscrew the battery cover
- Insert 2 X 1.5V AA batteries with the positive (+) and negative (-) ends facing in the proper direction as indicated in the battery compartment.
- Replace the cover.

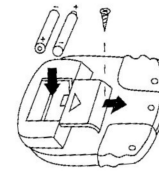

SAFETY BATTERY USAGE

- Different types of batteries or new and used batteries are not to be mixed.
- Non-rechargeable batteries are not to be recharged.
- Do not use rechargeable batteries.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short circuited.
- Exhausted batteries are to be removed from the game unit.
- When not in use, remove batteries to prevent possible leakage.

CAUTION:
Battery should be replaced by adult.
Not suitable for children under 36 months.
May contain small parts.

CARING FOR YOUR DEVICE

- If the device begins to get a dim display or malfunction, replace the batteries.
- After replacing batteries, press RESET button to reset the unit in order to ensure proper functioning.
- In most cases, game malfunctions because of weak batteries.

TO ASSEMBLE

- Insert the figure into the top of the front cabinet and turn 90 degrees clockwise to secure the figure in position.

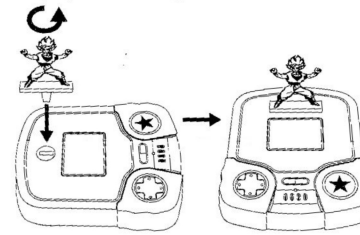

BUTTON DESCRIPTION

S1=UP
S2=DOWN
S3=LEFT
S4=RIGHT
S5=START/ATTACK
S6=MODE
S7=SOUND
S8=RESET*

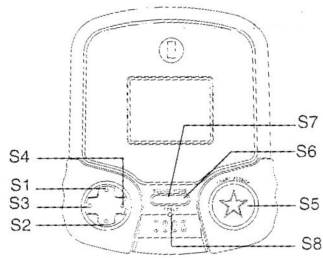

RESET button: It is suggested you press this button once to make sure the functions work properly after battery installation or if the unit is malfunctioning.

SOUND ON/OFF

Press SOUND button anytime during the game to turn the sound on or off.

AUTO POWER OFF

If no buttons are pressed or there is no activation for about 3 minutes, the game will automatically turn off.

OBJECT OF THE GAME

Join Goku™ and the rest of the Dragon Ball Z™ team on their epic adventures. Goku™'s training has brought his fighting ability to never before seen levels.

Now, together with his friends Piccolo™ and Krillin™, his son Gohan™, and even Vegeta™, he must face the most powerful enemies in the galaxy. Goku™ and the Dragon Ball Z™ team must defeat Frieza™ and his hired mercenaries, the Ginyu Force™, in an effort to save the planet Namek™. Battle side by side with Goku™ using your Battle For Namek™ LCD Game to beat back Frieza™ and gain control of the Dragon Balls™! Join the Dragon Ball Z™ team!

CHARACTER INTRODUCTION

Goku™

Jiece™

Captain Ginya™

Frieza™

Dragon Ball™

GAME PLAY

- To power up the game, press any button. A demonstration of the game will appear on the screen. To end this demonstration mode, press the MODE button.
- To select your skill level, press the MODE button once to choose Level 1 (beginner), which lights up "L-1" on the scoreboard, and twice to select Level 2 (advanced), which lights up "L-2" on the scoreboard.
- Press the START button to begin the game. The scoreboard will show you the highest score to date at that level.
- This game features 20 action-packed rounds, each with increasing difficulty.
- You begin the game with 3 lives. Each time an opponent overpowers you, you will lose one life.
- To complete a round, you must defeat Jiece™ in ring#1 and advance to ring #2 where you must defeat Captain Ginya™. Then you advance to ring#3 and battle Frieza™. Along the way you must also collect the two hidden Dragon Ball™ ( ) in order to win.
- To collect a Dragon Ball™ ( ), press the START/ATTACK button to make the jump, then press the UP button to grab the Dragon Ball™.

HINT: You never know when the hidden "Dragon Ball™" icon may appear.

CONTINUE MODE

- When the game ends, press the MODE button to enter the CONTINUE MODE. CON appears on the scoreboard. You have two choices:
- Press the START button to begin at the last round you reached in the game that just ended. Your score will start again from zero.
- Press the MODE button to exit the CONTINUE MODE. Keep pushing the MODE button until the skill level (L1 or L2) you wish to play appears on the scoreboard. Then press the START button.

SCORING

- Gain 100 points for defeating Jiece™ and Captain Ginya™.
- Gain 200 points for collecting Dragon Ball™.
- Gain 300 points for defeating Frieza™.
- Gain 1000 points for winning the round.
- The maximum score you can attain is 99,990 points. Once you reach this score, the scoreboard will reset to show "00" points and will continue flashing.
- The highest score for each skill level appears on the scoreboard before each game starts. To erase the previous highest score, simply push the RESET button with the tip of a pen or remove the batteries.

PLEASE KEEP THIS INSTRUCTION SHEET SINCE IT CONTAINS IMPORTANT INFORMATION.
Caution: this product contains glass which may cause injuries if broken.

LIMITED 90 DAY WARRANTY

MGA Entertainment warrants to the original consumer purchaser this product that the product will be free from defects in material or workmanship for a period of 90 days from the date of original purchase.
This warranty does not cover damages resulting from misuse, improper or abnormal usage, negligence, leaking batteries, improper service or other causes not arising from defects in material or workmanship.
During this 90 day warranty period, the product will be either repaired or replaced (at MGA's option) at no charge to the purchaser, when returned to either the retailer with it's original sales receipt (containing date of purchase) or to MGA.
The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.
All product returned to MGA must be shipped prepaid and insured for loss or damage to:
MGA Entertainment
Repair Department
16730 Schoenborn Street
North Hills, CA 91343-6122
Any returned product should be carefully packed in packing material sufficient to avoid damage during shipment. Please include a written description of the defect, a copy of the original sales receipt (containing date of purchase) and your printed name, address and telephone number.
Some states do not allow limitations on how long an implied warranty last or the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights and you may also have other rights which vary from state to state.
This warranty is only valid within the United States and Canada.

© 1999 BIRD STUDIO/SHUEISHA, TOEI ANIMATION.
Licensed by FUNimation ® Productions, Inc. All Rights Reserved.
Dragon Ball Z and all logos, character names and distinctive likenesses thereof are trademarks of TOEI ANIMATION

TM & © 1999 MGA Entertainment, Inc.
All Rights Reserved.
16730 Schoenborn Street,
North Hills, CA 91343 USA
www.mgae.com **MADE IN CHINA**
1-800-222-4685

86-G318-A250